

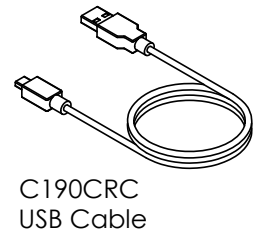
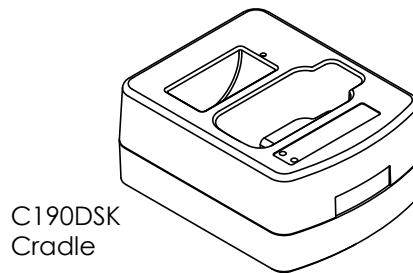


Contents:

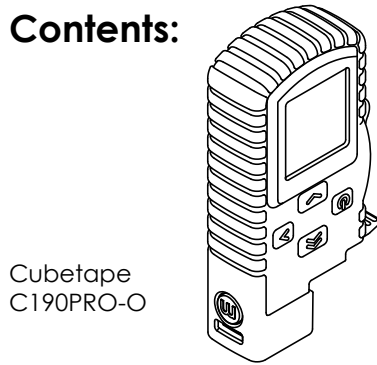

Installation:

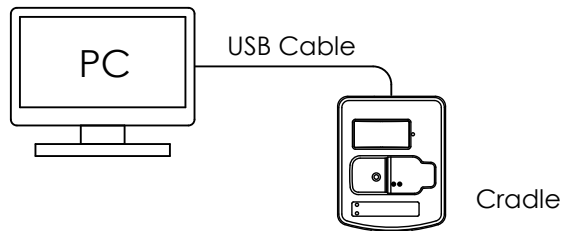


Operations:

- Turn on Cubetape
- Cubetape and cradle have been pre-paired at the factory
- Blue LED indicators are on permanently when connected
- To scan a barcode and send to the active PC application, press the SCAN button \wedge
- To record and send a measurement to the active PC application, press the Enter button M


Charging:

Place device in the cradle

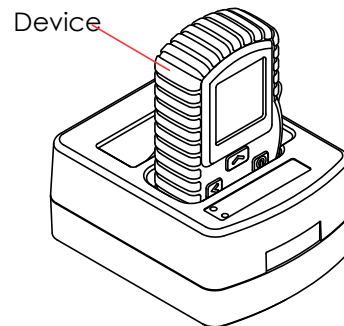

Bluetooth Pairing:

If a Cubetape needs to be paired with a new cradle, or
Re-paired with current cradle
Scan the pairing barcode

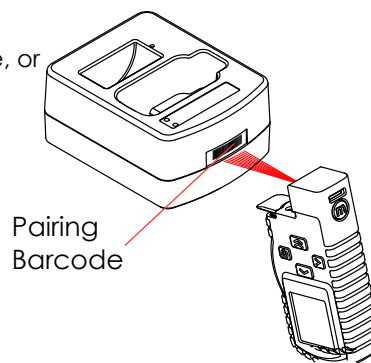

PC Connection:

To change PC connection from HID to Serial, move the dipswitch beneath the device to ON
Some software provides cursor independence when the PC connection is set to serial,
see www.cubetape.com for details